


LX Sit-Stand Collar Kit for 40mm Poles




Maximum gewichtscapaciteit voor elke LX HD Zitten-Staan arm:

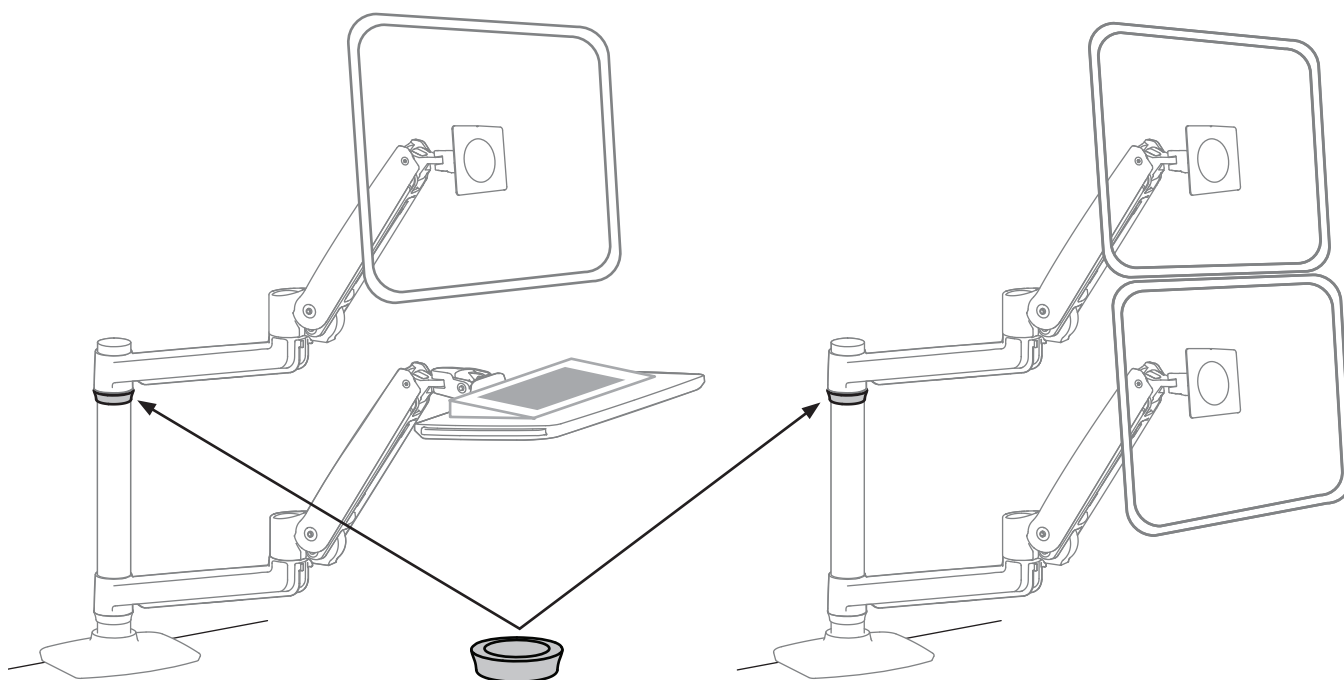

WAARSCHUWING!


Als u LX HD Zitten-Staan armen gebruikt, wordt de gewichtscapaciteit verlaagd tot 25 lbs. (11,3 kg) per arm voor configuraties met een bureaукlem en 30 lbs. (13,6 kg) per arm voor configuraties met een bevestigingsgat. Nalaten deze maximale gewichtsbependingen te volgen zal een onveilige situatie creëren die kan leiden tot beschadiging van het product en/of verwondingen.

KLEM

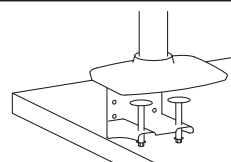

**≤ 25 lbs
(11.3 kg)**

PAKKINGRING

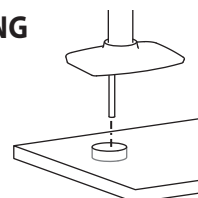

**≤ 30 lbs
(13.6 kg)**



Onderdelen

	A	B
1	1x 	1x  2.5mm

De nieuwste Gids voor installatie door de gebruiker kunt u vinden op: www.ergotron.com



User's Guide - English
Guía del usuario - Español
Manuel de l'utilisateur - Français
Gebruikersgids - Deutsch
Benutzerhandbuch - Nederlands
Guida per l'utente - Italiano
Användarhandbok - svenska

.....
.....




www.ergotron.com

USA 1-800-888-8458




Europe +31 (0)33-45 45 600

China 86-769-86018920





- 1** Als de paal en basis goed vastgezet zijn op het oppervlak van het bureau moet u armen die aan de paal vastgemaakt zijn verwijderen.

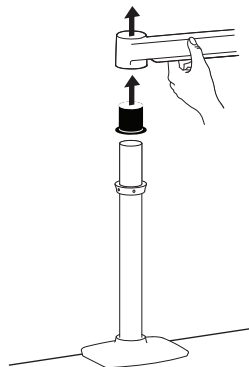

- 2** a. Maak de ring los, schuif die omlaag naar de gewenste hoogte voor de laagste arm.
b. Draai de twee vastzetschroeven in de ring aan om deze vast te zetten.
c. Bevestig de laagste arm.

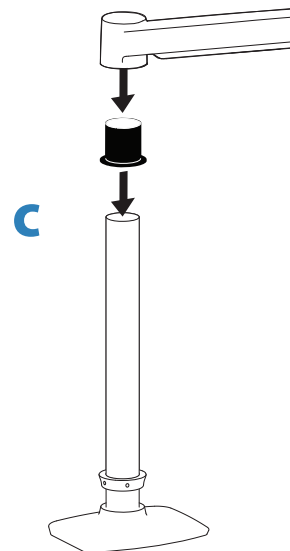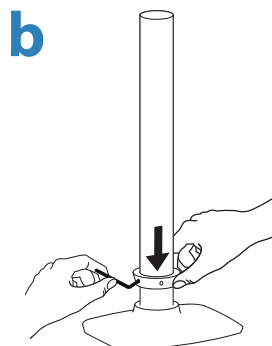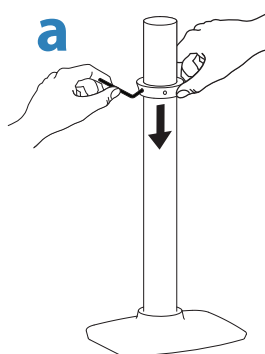

- 3** a. Bevestig de meegeleverde ring.
b. Draai de twee vastzetschroeven in de ring aan om deze vast te zetten ten minste 3" (76 mm) onder de top van de paal.
c. Bevestig de bovenste arm.

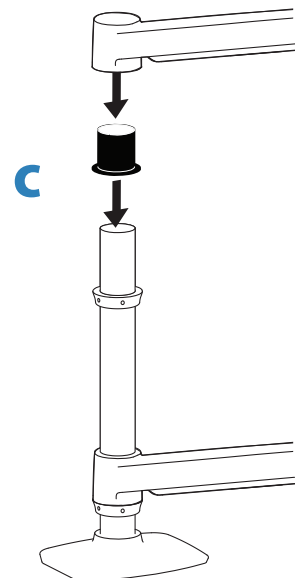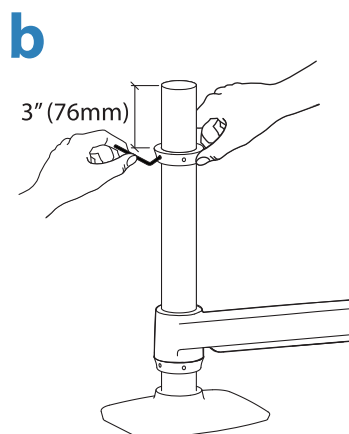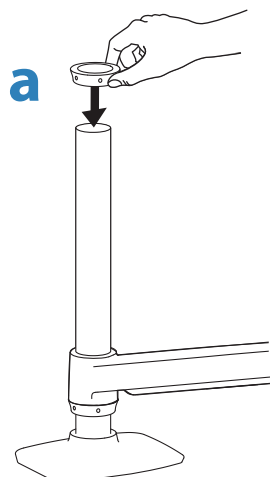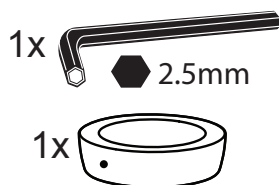

Ga voor service en garantie naar www.ergotron.com

Plaatselijke telefoonnummers voor de klantendienst kunt u vinden op: <http://contact.ergotron.com>



© 2013 Ergotron, Inc.
All rights reserved.

While Ergotron, Inc. makes every effort to provide accurate and complete information on the installation and use of its products, it will not be held liable for any editorial errors or omissions (including those made in the process of translation from English to another language), or for incidental, special or consequential damages of any nature resulting from furnishing this instruction and performance of equipment in connection with this instruction. Ergotron, Inc. reserves the right to make changes in the product design and/or product documentation without notification to its users. For the most current product information, or to know if this document is available in languages other than those herein, please contact Ergotron. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise without the prior written consent of Ergotron, Inc., 1181 Trapp Road, Eagan, Minnesota, 55121, USA. Patents Pending and Patented U.S. & Foreign. Ergotron is a registered trademark of Ergotron, Inc.

**Americas Sales and
Corporate Headquarters**

St. Paul, MN USA
(800) 888-8458
+1-651-681-7600
www.ergotron.com
sales@ergotron.com

EMEA Sales

Amersfoort, The Netherlands
+31 33 45 45 600
www.ergotron.com
info.eu@ergotron.com

APAC Sales

Tokyo, Japan
www.ergotron.com
apaccustomerservice@ergotron.com

Worldwide OEM Sales

www.ergotron.com
info.oem@ergotron.com